




Remote Control User Manual

GL-RC-009S

Product Presentation Diagram

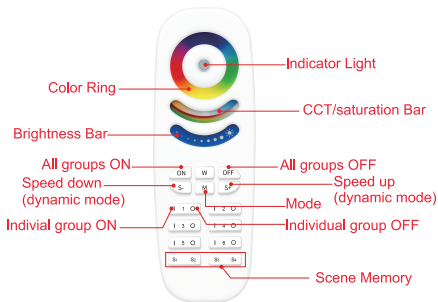

Product Parameter

Model NO.: GL-RC-009S	Material: PC
Modulation Method: GFSK	Input Voltage: 3V (2*AAA Battery)
Programs: 9 kinds	Standby Power: <16uA
Transmitting Power: 6dBm	Working Temperature: -20°C-45°C
N.W: 63.3g	G.W: 76.0g
Control Distance: 30m	Size: 157x53x18mm

Key Function Description:

- 1) Color Ring: Touch the color ring to adjust the RGB color.
- 2) CCT/Saturation Bar: In CCT mode, adjust the color temperature; in RGB mode, change the color saturation.
- 3) Brightness Bar: Slide to adjust the brightness.
- 4) W: Switch to CCT mode.
- 5) All groups or individual group ON: Turn on the lights connected to the remote control.
- 6) All groups or individual group OFF: Turn off the lights connected to the remote control.
- 7) M: Mode switching button.
- 8) S+: Increase the speed of dynamic mode changes.
- 9) S-: Decrease the speed of dynamic mode changes.
- 10) S1~4: Short press to resume to the saved scenes, long press to save the current state as a scene. The LED strip will flash once to indicate successful saving. Note: This function requires the controlled lights to support scene functionality.

Remote Control Pairing/Unpairing

The light must be paired with the remote control before controlling.

Pairing Method

- (1) Disconnect the power to the lights, wait for 10 seconds, and then reconnect the power. Within 4 seconds of powering on, proceed to the next step.
- (2) Press any zone on "I" button on the RF remote control. The lights will flash (refer to the light's user manual for specific indications), indicating successful pairing.

- (3) If pairing fails, repeat the above steps.



Note:

1. One light can be paired by four remote controls at max. When the fifth remote control is paired successfully, the first paired remote control will be automatically invalid.
2. One lamp can be paired with any group among the 1-6 groups in the remote control. When it's paired with one of them, it can not be paired with the other group in the remote control.

Unpairing Method

(1) Unpair an individual group:

1. Disconnect the power to the lights, wait for 10 seconds, and then reconnect the power. Within 4 seconds after powering on, proceed to the next step.



short press 5 times

2. Press the "I" button of the group 5 times which the lights connected with. The lights will flash (refer to the light's user manual for specific indications), indicating successful unpairing.

3. If unpairing fails, repeat the above steps.

(2) Unpairing All Groups:

1. Disconnect the power to the lights, wait for 10 seconds, and then reconnect the power. Within 4 seconds after powering on, proceed to the next step.



short press 5 times

2. Press the all groups "ON" button five times on the remote control. The lights will flash (refer to the light's user manual for specific indications), indicating successful clearing.

3. If unpairing fails, repeat the above steps.

Scene Button Function

Note:

This function requires the controlled lights to support scene functionality.

1. Save Scenes:

1. Set the controller to the desired state.
2. Long press any of the S1-S4 scene buttons.
The lights will flash once, indicating successful scene saving.



2. Resume Scenes:

Short press the desired scene button once. The lights will change to the saved scene state, indicating successful scene calling.



Attention

1. During use, if the indicator light flashes rapidly, please replace the battery promptly. Do not use low-quality batteries to avoid leakage and damage to the remote control.
2. This 2.4 GHz remote control is a precision electronic product. Do not use it in damp, high-temperature, dusty, or high-pressure environments. Please use it indoors in a dry and static-free environment.
3. Do not use the product in metal shielded areas or around strong magnetic fields, as it will severely affect the wireless signal transmission of the product.

Disclaimers

- * Our company will update the content of this manual according to the improvement of product functionality. The updates will be displayed in the latest version of this manual without further notice.
- * Due to our continuous adoption of new technologies, product parameters are subject to change without further notice.
- * This manual is for reference and guidance only and does not guarantee complete consistency with the actual product. Actual application should be based on the actual product.
- * The components and accessories described in this manual do not represent the standard configuration of the product. The specific configuration is subject to the packaging.
- * All text, tables, and images in this manual are protected by relevant national laws and may not be used without our permission.

EC

REP

LED-Trading Tobias Ebert

Schoeneicher Str. 42, Schoeneiche b. Berlin, Germany, 15566
0049 30 641 689 17 info@led-trading.de

GL-CR-I-006v1.1